

SKOPE Counterline & Slimline Chillers

CL400/600/800i-2 CC300/500/700i-2

INTEGRAL models



Model: CL400i-2-2SW



Model: CL600i-2-3SW

User Manual

MAN0681 Rev. 4.0 Jan. 2008 edition

SKOPE[®]
Refrigeration

SKOPE Counterline & Slimline Integral Chiller
Models: CL400/600/800i-2 & CC300/500/700i-2
User Manual

MAN0681

Rev. 4.0 Jan. 2008 edition.

Copyright © 2007

SKOPE Industries Limited.

All rights reserved.

SKOPE Industries Limited reserve the right to alter specifications without notice.

SKOPE[®] is a registered trade mark of SKOPE Industries Limited.

TRADE MARK INFRINGEMENT

The SKOPE trade mark on this product is infringed if the owner, for the time being, does any of the following:

- Applies the trade mark to the product after their state, condition, get-up or packaging has been altered in any manner
- Alters, removes (including part removal) or obliterates (including part obliteration) the trade mark on the product
- Applies any other trade mark to the product
- Adds to the product any written material that is likely to damage the reputation of the trade mark

Notice of the above contractual obligations passes to:

- Successors or assigns of the buyer
- Future owners of the product

TABLE OF CONTENTS

INSTALLATION

Safety Information4
Installing the Cabinet5

OPERATION

Cabinet Operation7

ELECTRONIC CONTROLLER

Controller Display8
Temperature Setpoint10

SERVICING

Troubleshooting11
Lighting14
Cleaning15
Contact Addresses17
Warranty17

INSTALLATION

Safety Information

When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully and retain for future reference.

- When used by, or near, young children or infirm persons, close supervision is necessary. Young children should be supervised to ensure that they do not play with the appliance.
- Do **NOT** use this appliance for other than its intended use.
- Do **NOT** cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
- Do **NOT** probe any opening.
- Do **NOT** overload the power supply. See the rating label inside the cabinet for power supply and current draw.
- Only use this appliance with voltage specified on the rating label.
- Ensure adequate ventilation of the SKOPE refrigeration unit.
- Be careful not to touch moving parts and hot surfaces.
- Regulations require that all electrical work be carried out by authorised persons. For your own safety, and that of others, ensure this is done.
- If the supply cord becomes damaged, it must be replaced by a SKOPE authorised service agent, or similarly qualified person, in order to avoid a hazard.
- If the refrigeration unit is required to be installed or removed from the cabinet, ensure all necessary safety precautions are observed.
- This chiller is not designed to be stable in motion. Exercise caution when moving or transporting this chiller.

Caution:

Disconnect the cabinet from the mains power supply before attempting any cleaning or maintenance.

INSTALLATION

Installing the Cabinet

Castors / Legs

If your SKOPE Counterline Chiller has been supplied with either the optional adjustable height castors or adjustable legs (packed with the cabinet), they should be fitted to the base of the cabinet before final positioning of the chiller.

IMPORTANT: Do NOT lay the chiller onto its back when fitting the castors or legs.

Positioning

When positioning the chiller, avoid direct sunlight, and warm draughts etc. Adequate allowance should be made for door opening. The chiller must be positioned on a level surface for the doors to shut and seal correctly, and to prevent the condensate tray from overflowing.

Ventilation

For efficient operation of the chiller, it is essential that adequate ventilation be provided around the refrigeration unit. The maximum recommended operating ambient temperature is 40°C.

Important:

Never store cardboard cartons or other items in front of the refrigeration unit. The ventilation slots in the unit front cover must be kept clear at all times.

Shelves

Remove all packaging material from the shelves. Clip the shelf support brackets into the shelf support strips, at the desired heights, and fit the shelves. The shelves may be positioned at different heights to suit various products. Always ensure that the shelf clips are securely engaged in each of the shelf support strips. The shelf support strips are marked '+' for easy location of shelf clips and can be lifted up and removed for cleaning purposes.

INSTALLATION

Power Supply

The chiller is supplied with a 2.3m flexible power cord fitted with a 3-pin plug, which exits below the refrigeration unit front cover. Initial retrieval of the power cord is from inside the refrigeration unit compartment, behind the unit front cover. To retrieve the power cord:

1. Open the unit front cover, by undoing the bottom fixing screw and then lifting the cover up from the bottom and swing open.
2. Pull the power cord fully out from the unit compartment and remove the rubber band.
3. Push the unit end of the power cord into the grey plastic clip on the front of the unit base and close the plastic clip over the cord, ensuring it is held firmly in place (see Figure 1 below).
4. The power cord can now be run under the cabinet and plugged into a power supply socket.
5. Close the unit front cover, by lifting the cover up from the bottom and pushing firmly closed. Remember to refit the bottom fixing screw.

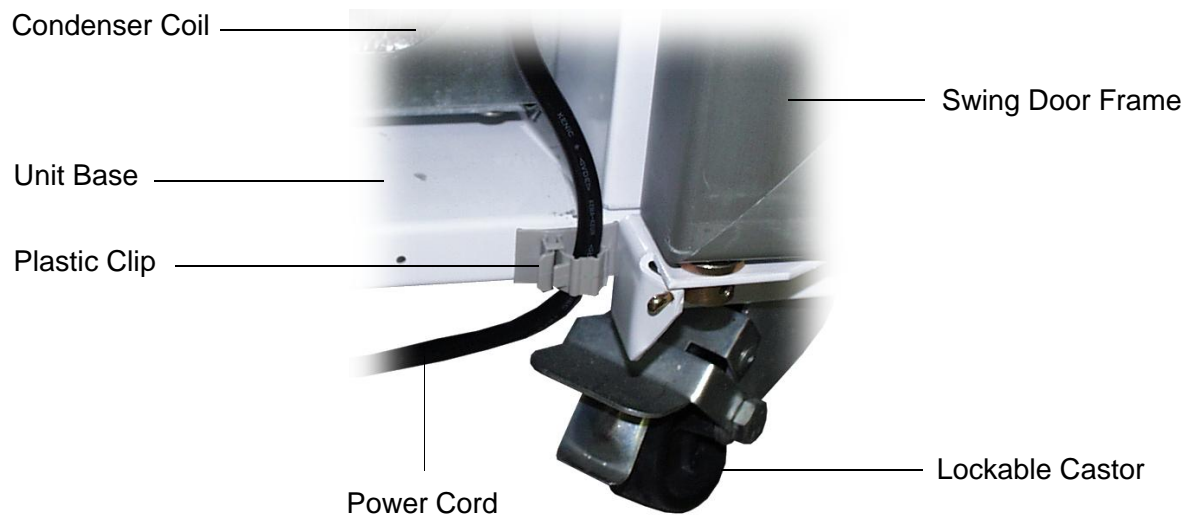


Figure 1: Power Cord Clip

OPERATION

Cabinet Operation

Connect the chiller to the power supply and check operation of the refrigeration unit, cabinet lighting and electronic controller.

Refrigeration Unit

The compressor and evaporator and condenser fans should all operate within two minutes from the time the cabinet is plugged in. This may be verified by listening for compressor switch on and checking for air movement out of the top ventilation slots in the refrigeration unit front cover. The compressor and condenser fans should switch off and on, depending on the cabinet temperature.

Cabinet Lighting

The light switch, located next to the electronic controller on the refrigeration unit front cover, activates the cabinet interior lighting and can be switched on or off as required. The fluorescent lights will require a period of time to stabilise following initial start up.

Electronic Controller

At initial start up, the electronic controller will display the current cabinet temperature (see pages 8-9 for controller display).

Loading Product

The chiller should be left running for 30 minutes before loading with product. When loading the cabinet shelves with product:

- Allow air space around all the product, to ensure even cooling and efficient operation of the chiller. Leave airspace above product loaded on the top shelf and leave a gap of approx. 50mm next to the return air grille between the cabinet interior and the refrigeration unit compartment.
- Do not allow products to overhang the front of the shelf as this could prevent the doors from shutting or cause glass breakage. .
- Do not exceed a maximum loading of 195 kg/m².
- Remove some product if the shelves are flexing or bending.

ELECTRONIC CONTROLLER

Controller Display

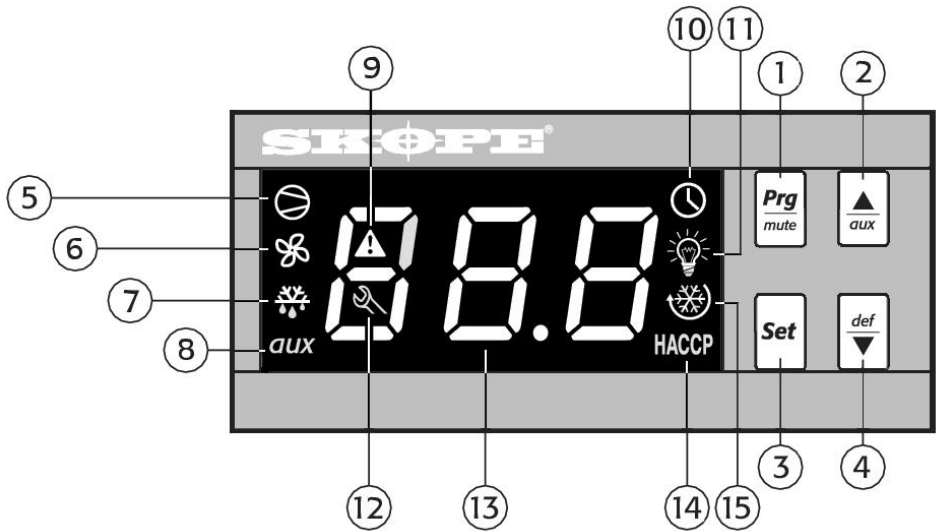


Figure 2: Controller Display

Keypad

ITEM	KEY	FUNCTION
1		Prg / mute: To initiate programme sets, press for 5 seconds. Mutes the audible alarm (buzzer) and deactivates the alarm relay.
2		UP / aux: To scroll settings UP (in programme mode).
3		Set: If pressed for more than 2 seconds displays and / or enables changing the temperature setpoint (see page 10).
4		DOWN / def: To scroll settings DOWN (in programme mode).

Table 1: Keypad Functions

ELECTRONIC CONTROLLER

Icons









ITEM	ICON	FUNCTION
5		COMPRESSOR: ON when the compressor and condenser fan starts. Flashes when activation of the compressor is temporarily delayed.
6		FAN: n.a.
7		DEFROST: ON when the defrost is activated. Flashes when the activation of the defrost is temporarily delayed due to procedures in progress.
8	<i>AUX</i>	AUX: n.a.
9		ALARM: Flashes in the event of alarms.
10		CLOCK: n.a.
11		LIGHT: n.a.
12		SERVICE: Flashes in the event of malfunctions.
13		DISPLAY: Shows the cabinet temperature.
14	HACCP	HACCP: n.a.
15		CONTINUOUS CYCLE: n.a.

Table 2: Icon Functions

ELECTRONIC CONTROLLER

Temperature Setpoint

The chiller temperature setpoint is factory set at 1.0°C. If necessary the standard setting can be adjusted between 0.5°C and 3.5°C (see Table 3 below).

SKOPE do not recommend that the setpoint be changed unless it is absolutely necessary, and then only by small increments at a time.

To View and Adjust the Temperature Setpoint:

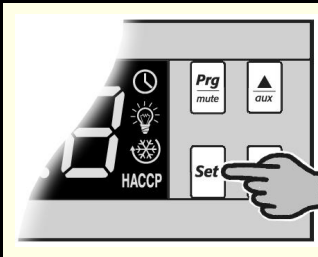
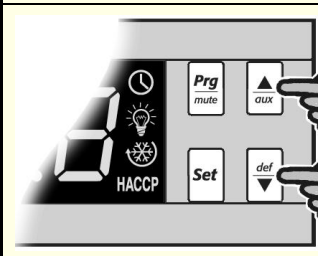
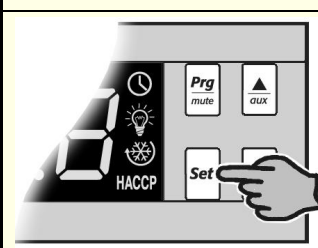
	<p>1. To view the setpoint: press and hold the SET key for 2 seconds, until the setpoint value flashes.</p>
	<p>2. To adjust the setpoint: press either the UP or DOWN keys to display the required setpoint value.</p>
	<p>3. Press the SET key again to memorise the new setpoint value. If this is not done within 60 seconds, changes will be lost and you will need to repeat the above procedure.</p>

Table 3: Viewing and Adjusting the Temperature Setpoint

SERVICING

Troubleshooting

Complaint	Possible Cause	Repair
1. Cabinet not operating and no controller display:	<ul style="list-style-type: none">• Loss of power supply.	<ul style="list-style-type: none">• Check mains power supply.
2. Cabinet lights not operating:	<ul style="list-style-type: none">• Blown cabinet fuse.• Failed fluorescent tube.• Controller alarm.	<ul style="list-style-type: none">• Requires technical repair by a SKOPE Authorised Service Agent.• Check fluorescent tubes.• Determine cause and eliminate (see pages 12-13).
3. Power consumption is higher than expected:	<ul style="list-style-type: none">• Unit operating too hot.• Cabinet door is opened excessively.	<ul style="list-style-type: none">• Clean condenser. Ensure the chiller is installed with good ventilation around the refrigeration unit.• Keep door/s open for minimum time.
4. Product is too warm and spoiling:	<ul style="list-style-type: none">• Restricted cabinet airflow.• Temperature setpoint is too warm.	<ul style="list-style-type: none">• Ensure product is not blocking airflow slots and there is air space around all the product.• Adjust setpoint (see page 10).
5. Warm cabinet temperatures and/or compressor operating for long periods (more than 1 hour):	<ul style="list-style-type: none">• Blocked condenser.• Poor refrigeration unit ventilation.	<ul style="list-style-type: none">• Clean condenser (see page 15).• Ensure the cabinet is installed with good ventilation around the refrigeration unit.

Table 4: Troubleshooting

SERVICING

Controller Alarms
























CODE	DISPLAY ICON	ALARM DESCRIPTION
	 Flashing	Product HIGH temperature alarm
	 Flashing	Product LOW temperature alarm
	 Flashing	Refrigeration system high temperature pre-warning
	 Flashing	Refrigeration system high temperature shutdown
	 Flashing	Ambient probe fault
	 Flashing	Evaporator probe fault
	 Flashing	Condenser probe fault
	None	Defrost over-time limit
	 Flashing	Real-time clock fault
	 Flashing	Controller E prom error
	 Flashing	Controller E prom error
	None	Start defrost request
	None	End defrost request

Table 5: Controller Alarms

SERVICING

INITIAL ACTION	FINAL ACTION
<ol style="list-style-type: none"> 1. Check the cabinet product loading to ensure ventilation slots are not blocked and that product does not overhang the shelves. 2. Ensure the cabinet is installed with good refrigeration unit ventilation. 3. Check and clean the condenser coil (see pages 15-16). 4. Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. 	<p>If alarm persists, contact SKOPE.</p>
<ol style="list-style-type: none"> 1. Clean the condenser coil (see pages 15-16). 2. Check refrigeration ventilation. Ensure clear airpath at the top and front of the cabinet (to extract hot air). A minimum of 200mm clear space is required in front of the refrigeration unit. 3. Ensure the cabinet is installed in a suitable environment. 4. Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. 	
<p>Unplug cabinet from the power supply for 1 minute, then reconnect to power supply.</p>	
<p>None</p>	<p>None</p>

Lighting

Cabinet Interior Lights

Depending on the model cabinet, the chiller is fitted with either one or two fluorescent tubes. See Table 6 below for the correct tube size.

Model	Fluorescent Tube	Qty
2 Door	21 Watt T5 fluorescent tube (Ø16mm x 850mm)	1
3 Door	35 Watt T5 fluorescent tube (Ø16mm x 1450mm)	1
4 Door	21 Watt T5 fluorescent tube (Ø16mm x 850mm)	2

Table 6: Fluorescent Tube Sizes

To Replace a Fluorescent Tube:

1. Disconnect the cabinet from the mains power supply.
2. Remove the top light diffuser, by compressing the back section of the diffuser until it disengages from the aluminium housing and then push the diffuser back (see Figure 3 below).
3. The fluorescent tube can now be removed by revolving the tube until the pin position allows withdrawal.
4. When refitting the light diffuser, engage the back section into the housing, and then compress and snap the front section of diffuser back into place working along the full length of the light.

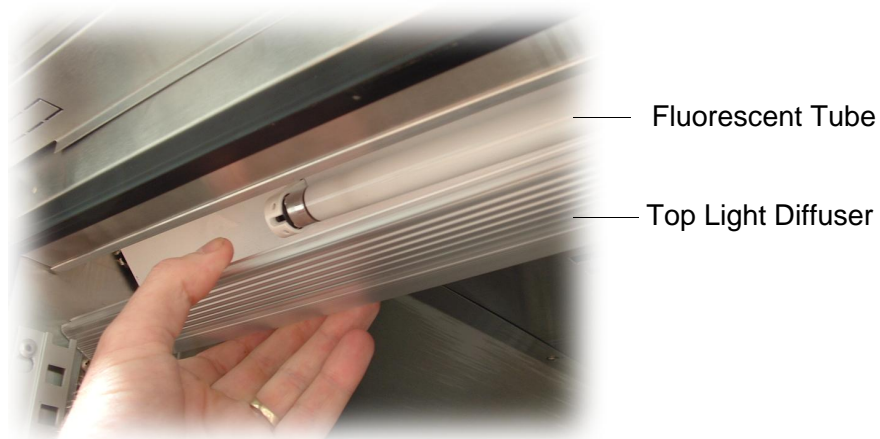


Figure 3: Replacing the Fluorescent Tube

Cleaning

When necessary, wipe both the interior and exterior of the cabinet with a damp cloth. The shelf support strips can be lifted up and removed for cleaning purposes. Ensure the cabinet is disconnected from the mains power supply before cleaning the cabinet. Periodic cleaning of the condenser coil is also recommended.

Condenser Coil

The condenser coil **MUST** be kept clean for reliable operation and to minimise power consumption (a blocked condenser can double power consumption). The condenser coil is situated behind the unit front cover.

To ensure trouble free performance, the condenser coil should be brushed clean once a month (see Figure 4 on page 16) and blown clean by qualified service personnel every six months. If the electronic controller display flashes '**cht**' the condenser coil immediately needs cleaning.

Over time, dust may accumulate within the condenser that cannot be removed with a brush. If this occurs, contact SKOPE to arrange for a SKOPE Authorised Service Agent to clean the condenser with compressed air.

Important:

If the electronic controller display flashes '**cht**' the condenser coil must be cleaned immediately.

To access the condenser coil:

1. Disconnect the cabinet from the mains power supply.
2. Open the unit front cover, by undoing the bottom fixing screw and then lifting the cover up from the bottom and swing open.
3. The condenser coil is now accessible for cleaning (see Figure 4 on page 16).
4. Close the unit front cover, by lifting the cover up from the bottom and pushing firmly closed. Remember to refit the bottom fixing screw.

Caution:

Disconnect the cabinet from the mains power supply before attempting any cleaning or maintenance.

SERVICING

Condenser Coil



Figure 4: Cleaning the Condenser Coil

Contact Addresses

New Zealand

SKOPE INDUSTRIES LIMITED

Head Office

PO Box 1091, Christchurch

New Zealand

Freephone: 0800 947 5673

Fax: (03) 983 3896

E-mail: enquiry@skope.co.nz

Website: www.skope.co.nz

Australia

SKOPE AUSTRALIA PTY LTD

A.C.N. 000 384 270

PO Box 7543, Baulkham Hills B.C.

NSW 2153, Australia

Freephone: 1800 121 535

Fax: 1800 121 533

E-mail: enquiry@skope.com.au

Website: www.skope.com.au

Warranty

To receive a warranty for your purchased cabinet, you **MUST** register your cabinet within four weeks from the date of invoice either by:

- filling out the in-cabinet warranty form and posting or faxing it back to SKOPE
- or filling out the online warranty form.

Cabinets that are not registered within the four weeks are not eligible for a warranty.